

4. Then place each (B) base on the (C) threaded rod and (D) column. Making sure tabs line up.

5. With each (B) base on , place (H) washer, (I) lock washer and (G) nut and tighten.

6. Add (F) levelers to base.

#### CARE & MAINTENANCE

##### GENERAL MAINTENANCE

As with any equipment, proper and periodic maintenance is necessary to ensure longevity of the product and customer satisfaction. To ensure you get the most out of your investment, please follow our recommended maintenance and care instructions.

We recommend that the products be examined every 30 days. Items requiring adjustments, showing any sign of structural failure, that have missing hardware or that show any cracks at the welds should be taken out of service immediately until repaired.

Loose screws should be tightened as required and missing or worn out foot caps must be replaced.

To obtain replacement parts, please contact your local representation or local dealer.

Furniture should be handled with care. When chairs are stacked, the stack should not be dragged. Stackable chairs should not be dropped or slammed down when being un-stacked. People should not rock backwards or stand on any emuamericas' item.

For storage, all furniture should be stored neatly, stacked to suggested height, and packed in a clean and dry area. Tables should not be flipped and stacked; any standing water needs to be removed to avoid damage to finish.

NOTE: Warranty may be voided if proper maintenance or care is not followed.

Full maintenance and care instructions for each product can be found on our website at [www.emuamericas.com](http://www.emuamericas.com)

##### PARTS/HARDWARE

We make available all parts, hardware and touch-up paint for the current product line at minimal cost.


## ASSEMBLY INSTRUCTION

### ZAK BASE #1363





(A) Spider X2

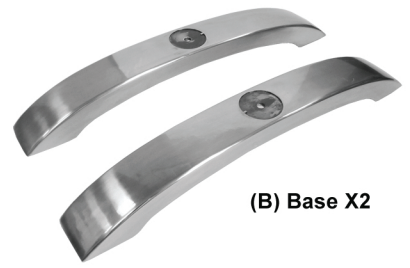

(B) Base X2



(D) Column X2



(E) Column cross bar X1



(C) Threaded Rod X2



(F) Levers X4




(G) Nut X6




(H) Washer X4



(I) Lock Washer X4

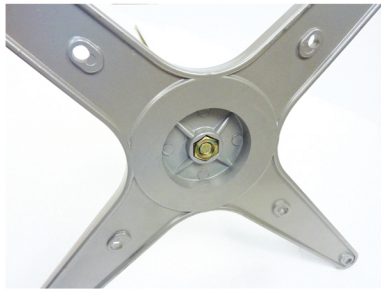

1. Place (G) nut into (A) spider repeat for second spider

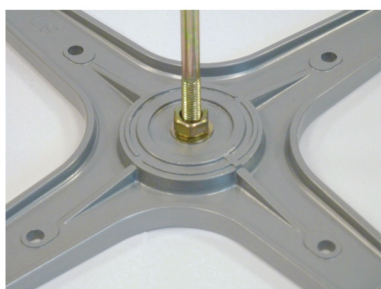

2. Flip spider over and add (C) threaded rod adding (H) washer, (I) lock washer and (G) nut. Tighten, repeat for second spider



3. With both spiders on the ground, aprox 24" apart on center, place (E) column cross bar in to (D) columns making sure the holes in the (E) column cross bar are vertical and (C) threaded rod goes though them.

